

Chapter 2

OPERATION ENVIRONMENT AND SETUP METHOD

2.1 OPERATION ENVIRONMENT	2 - 2
2.2 HOW TO INSTALL DC-7204	2 - 3
2.3 HOW TO CONNECT TO DC-204R/204Ra	2 - 6
2.4 HOW TO UNINSTALL DC-7204	2 - 7

2.1 OPERATION ENVIRONMENT

☐ Connectable instrument to this software

DC-204R/DC-204Ra/DC-104R/DC-104Ra	: up to 8 units
-----------------------------------	-----------------

Instrument other than the above can not be connected to this software.

☐ Personal computer

•OS	: Windows Vista (SP1) / 7 / 8 / 8.1 / 10
•CPU	: Pentium4, 1.6GHz or higher frequency
•Memory	: 256M byte or more is recommended
•Hard disk	: Necessary free space for installation is 10M bytes or more
•Display	: Resolution 1024 X 768 dots or more
•Peripherals	: CD-ROM Drive, USB Port

※Windows Vista, Windows 7, Windows 8, Windows 8.1 and Windows 10 are trademarks owned by U.S.A. Microsoft Corporation registered in U.S.A and other countries.


※Pentium is a trademark owned by Intel Corporation registered in U.S.A and other countries.

2.2 HOW TO INSTALL DC-7204


Method of DC-7204 installation is described in this section.

[Operation Method]


1. Insert the CD-ROM containing DC-7204 in the CD-ROM drive of the personal computer.
Make sure that the DC-204R/204Ra is not connected to the personal computer.
2. Execute [English] – [Setup.exe] in the CD-ROM.

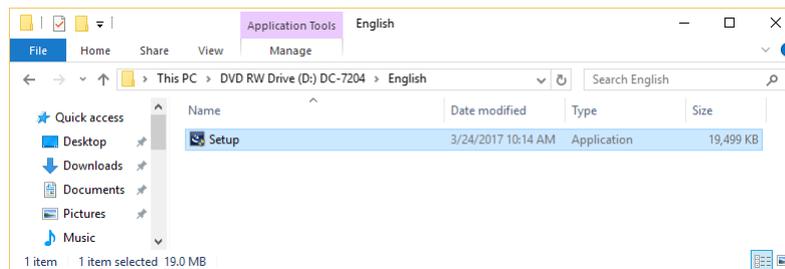


3. The user account control may be displayed depending on the setting of OS.
Click [Yes] button.

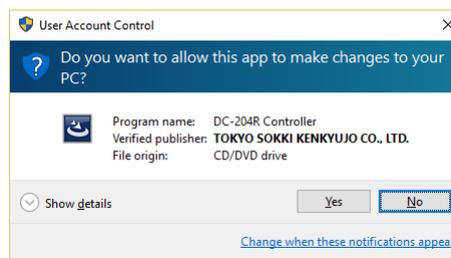


4. Start the installation of this software.
Click [Next>] button.

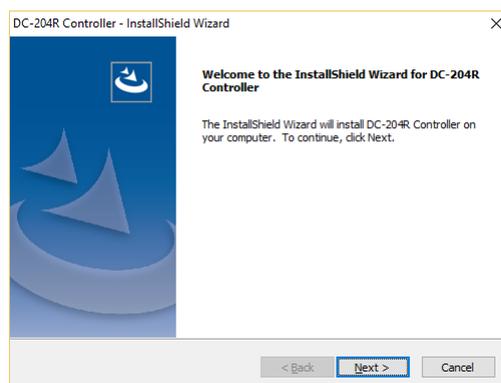


- 5. [Choose Destination Location] is displayed.
If you want to change the destination, click [Change...] button and choose the destination.
If you do not change the destination, click [Next >] button.

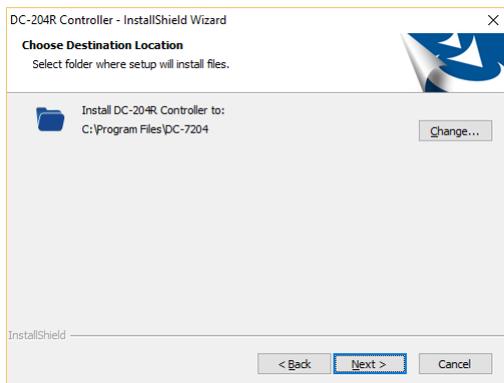

- 6. [Ready to Install the Program] is displayed.
Click [Install] button.

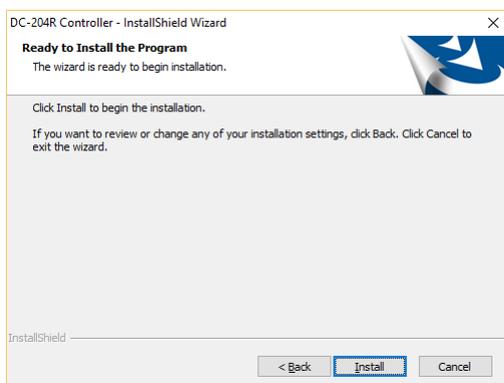


- 7. New window is opened, and [Start of the installation Wizard of the USB driver] is displayed.
Click [Next >] button to start the install of USB driver.

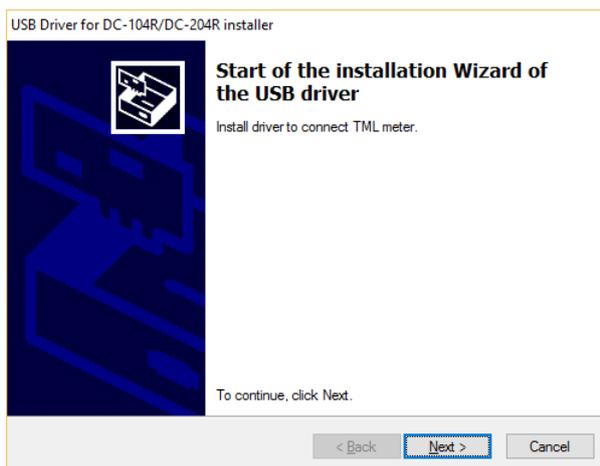


8. The Windows Security dialog box may be displayed depending on the setting of OS.
Click [Install] button.



9. [Completing the Device Driver Installation Wizard] is displayed.
Click [Finish] button to return to the installation of this software.

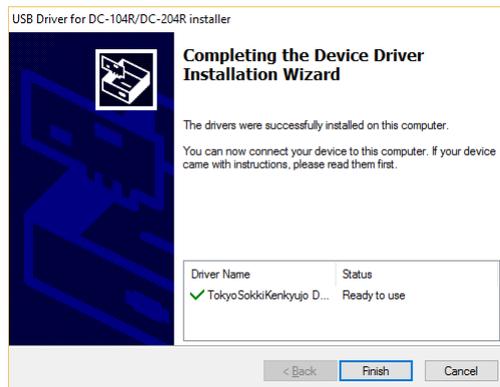

10. [InstallShield Wizard Complete] is displayed.
Click [Finish] button to complete the installation.

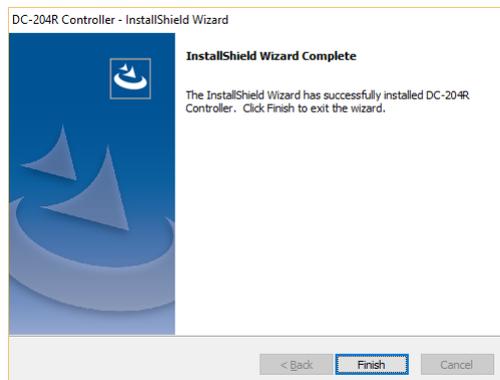


2.3 HOW TO CONNETCT TO DC-204R/204Ra

Method of connecting the DC-204R/204Ra and the computer and method of confirming the connection are described in this section.


[Connecting to computer]

1. Connect the DC-204R/204Ra to the computer by using USB cable.
2. When the DC-204R/204Ra is connected for the first time, the applicable device driver for the DC-204R/204Ra is automatically installed.

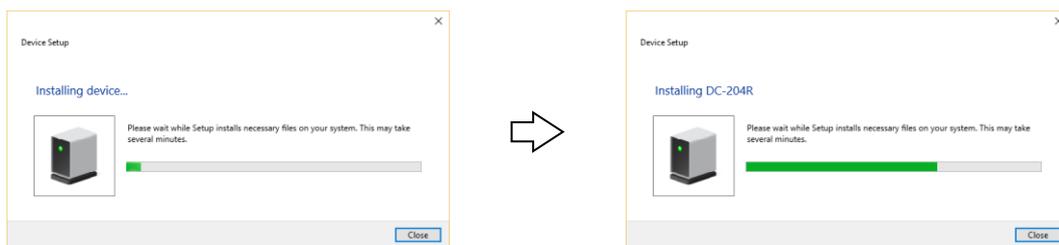

[Confirming of connection]

1. Open [Control Panel]-[Hardware and Sound]-[Device Manager].
2. If you find [DC-104R/DC-204R] in the [TML_Meters], installation has been normally finished.

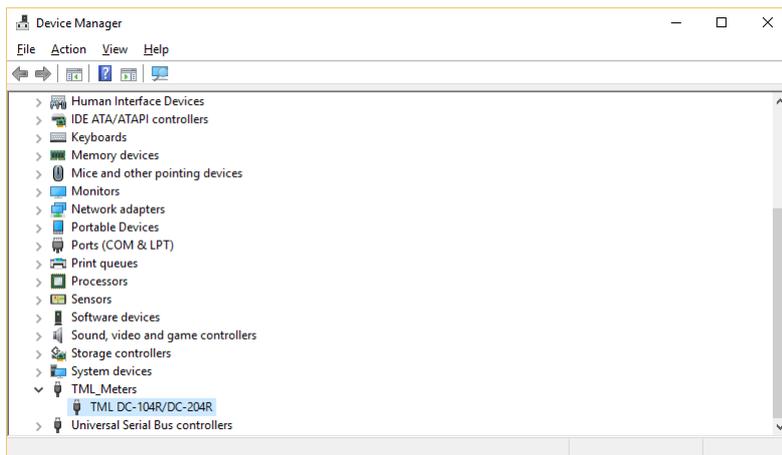


2.4 HOW TO UNINSTALL DC-7204


Method of uninstalling the DC-7204 is as follows.

[Operation Method]

1. Open [Control Panel]-[Programs]-[Uninstall a program].
2. Select [DC204R Controller].

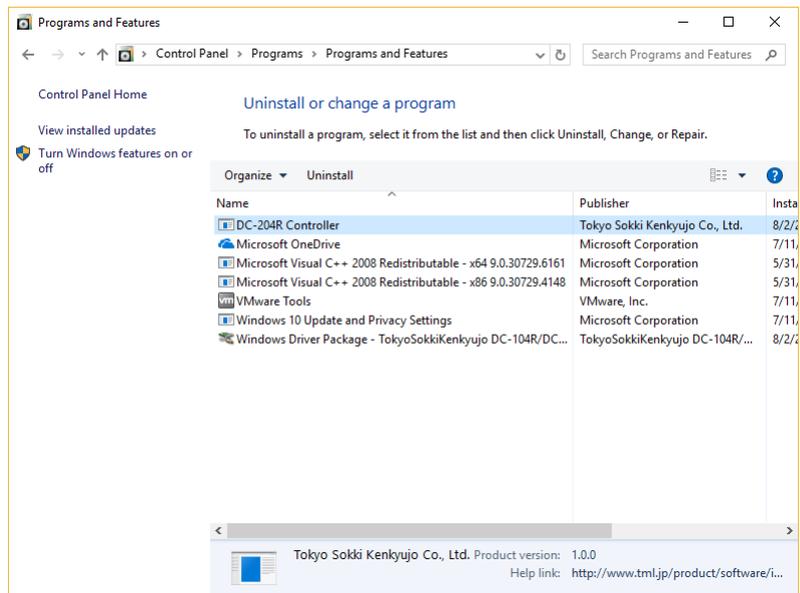

3. Click [Uninstall].

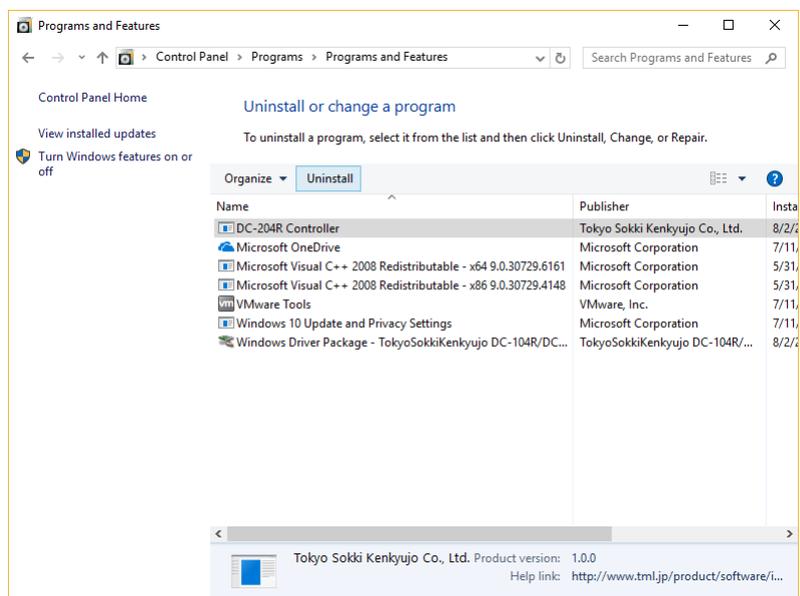

4. Dialog box is displayed for confirmation.
Click [Yes] button to complete the uninstallation.

